
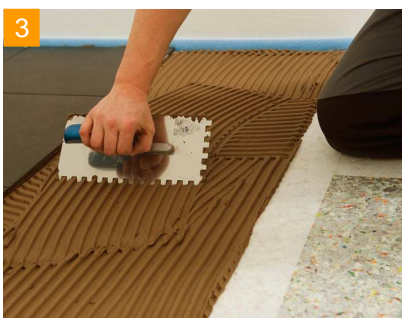


StrongBoard FL – In conjunction with System IDEAL EPS

Installation guide to tiling on StrongBoard FL – Part 2

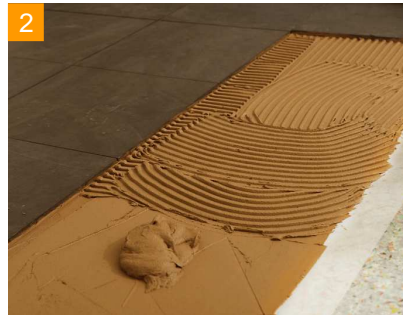

- 1 Before commencing, ensure that the StrongBoard FL elements are flat, level and are free of air gaps beneath.
- 2 Using Mapei Elastorapid apply a contact layer of adhesive on the StrongBoard.
- 3 Drag notched trowel through adhesive: 8mm trowel for 10x10cm to 30x30cm tiles, 10mm trowel for max. 60 x40cm tiles.
- 4 Apply adhesive completely to back of tiles.
- 5 Using this method avoids potential air gaps between the tile and the StrongBoard.
- 6 Once in location press firmly into position allowing a minimum of 4mm adhesive.
- 7 Grout distance should be as follows: 3mm for tiles up to 30x30cm; 4mm for tiles up to 40x40cm and 5mm for tiles up to 40x60cm.
- 8 Apply Mapei ULTRA Color Plus grout after 24 hours.
- 9 Clean excess grout diagonally with sponge.
- 10 Floor can be walked on after 12 hours. Heating should be turned on after 7 days.

For Mapei product availability please contact on 0121 508 6970